



eighthnerve

INSTALLATION GUIDE

triangle

eighthnerve

Nashville, TN

www.eighthnerve.com

email: info@eighthnerve.com

877 8TH NERVE

fax: 615 742 4617

Introduction

Thank you for purchasing this Eighth Nerve product. Ours are the most innovative acoustic products available, utilizing proprietary and patent pending design features never before available. To learn more about our designs and why these products work so effectively, please visit our website at www.eighthnerve.com.


Please read this installation guide completely before taking any further steps. The location where you install these products has everything to do with their performance, so please review the suggested placement diagrams or contact us for more specific information if you feel your room differs from the examples provided.

Packing List

Please take a moment to make sure that all the required parts are included. If you are missing any parts, please call your dealer to request replacements.

Eighth Nerve Triangle

- 1 x Eighth Nerve Triangle
- 1 x Installation Guide
- 1 x Triangle Loop Mount and Screw
- 1 x S-Hook
- 1 x Metal Ring
- 3 x Springs
- 4 x Rubber Stand-Offs

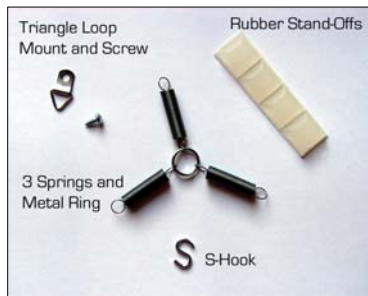


You will need a Phillips-head screwdriver for installation.

Installation

1. Place the Triangle Loop Mount about an inch from the corner on the ceiling, with the Triangle Loop facing out towards the room. Use the screw to affix the mount to the ceiling.

2. Peel the adhesive off the back of a Rubber Stand-Off and affix it to the Triangle in one of the indicated locations in the picture to the right. If you have crown molding or other features in your corner, you may want to use the alternate locations as suggested. If in doubt, take the Triangle and hold it up to the corner to determine where the Stand-Offs should go. The goal is to have an equal amount of space between all edges of the product and the wall and ceiling surfaces.

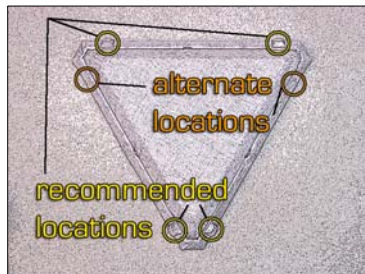

Installation (continued)

3. Make sure the 3 springs are attached to the metal ring. If any have come loose during shipping, please reattach them now. Attach the other end of each spring to one of the hooks on the back of the Triangle one by one until they are all attached and the completed product looks like the picture on the right.



4. Now take the S-Hook and hold it onto the metal ring and stretch the springs until the S-Hook latches onto the Triangle Loop Mount you installed on your ceiling earlier.



5. Gently remove your hand and let the springs pull the product into the corner. Now adjust the Triangle so that the edges are a uniform distance from the wall surfaces. That's it!





Guarantee

Eighth Nerve products are guaranteed to improve your sound, or we will refund your money less shipping within 30 days of purchase.

Terms

To qualify for our guarantee, you must discuss your setup and placement of the products with an Eighth Nerve representative. Due to the importance of the location of the products in your room, you may be asked to relocate them to areas that would make the product more effective. If you have placed the products where recommended and you are still not satisfied, Eighth Nerve will issue you an RMA number and you can ship your products back to Eighth Nerve in sellable condition for a full refund of the product price.

Suggested Placement Diagrams

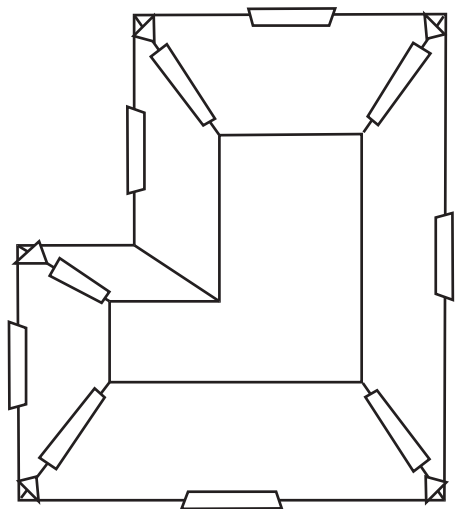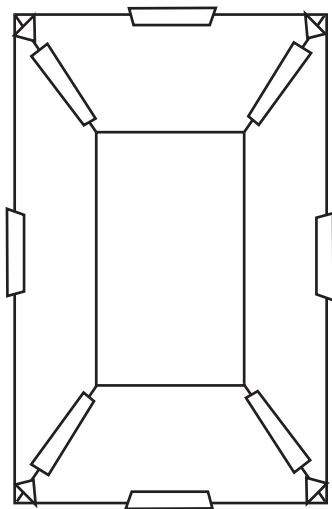

For more information please visit us on the internet at:

www.eighthnerve.com

© Eighth Nerve, Nashville, TN, USA